

HOW TO CHANGE TYRE ON ASTRO TUFF TRUK

From: Astro TUFF TRUK <astrotufftruk@yahoo.com>

Sent: 04 June 2024 12:39

Hi Andy,

Here are some pics about how to change tyre on Astro Tuff Truck

Remove the valve and then with an Allen key and socket undo the 4 dome top screws and then let the 2 rims separate from the tyre.

Swap it over and reassemble and then once the valve is back in, inflate to 30psi, check that the other wheels are all at 30psi while you're on.

Any problems just give me a bell.

See you at the IAS.

Best wishes,

Lee.





